



 
Active
Stylus Pen
FOR MICROSOFT SURFACE™



Warning

- This device is designed for indoors use only and to be kept dry.
- Do not deliberately damage the device or expose it to damp, direct sunlight, or high temperature conditions.
- Disassembling or failing to properly use and care for your device will void the warranty on the product.
- ALOGIC bears no responsibility for damage to the device or incidental damages arising from improper use or lack of care and is not liable for repair/ replacement of the device or other damages in these circumstances.
- Do not expose the pen and battery to high temperature. Overheating the battery may cause it to explode
- If the battery leaks, do not make contact with skin or eyes. If accidental contact is made, please rinse with clean water immediately and seek proper medical treatment.
- This pen and its accessories include small parts. Please keep them away from small children.





1 Type C Charge Port

2 LED Indicator

3 Right-click Button

4 Erase Button

5 Pen Tip

Specifications

Mode	ALASS
Weight	16g

Package Contents

Active Stylus Pen
User Manual

Instructions

1 Pairing with your Surface Device

- 1.1 To pair the Surface Stylus go to the start menu.
- 1.2 Search for settings and open the application.
- 1.3 Locate devices and open it.
- 1.4 Click on Add Bluetooth or other device.
- 1.5 Proceed to click on the "+" and follow by Bluetooth.




- 1.6 Press and hold the top button of your pen for 5-7 seconds until the LED flashes to turn on the Bluetooth pairing mode.
- 1.7 Select your pen to pair it on your Surface device.

2 Charging the Stylus

Use a Type-C Charging cable to charge the stylus. The indicator will be red while charging and turn off when it is fully charged. *

*Does not support wireless charging

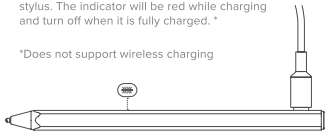

Compatible Devices

Surface Book, Surface Book 2, Surface Studio 1st Gen, Surface Studio 2, Surface Laptop 1st Gen, Surface Laptop 2, Surface Laptop 3, Surface Go, Surface Pro 3, Surface Pro 4, Surface Pro 5th Gen, Surface Pro 6, Surface Pro 7, Surface Pro 8, Surface Laptop 4, Surface Pro X, Surface 3 and Pen Tip Kit

*Stylus tilt function is only workable on surface Pro 5/Pro6, etc. Pro7/ProX, Surface book 2/3, Surface Go1/ Go2, Surface Studio 1/ Studio 2. May need to update the software.